


## Instructions for Smartie's Hang 10\*\* "On the Door" and "On the Bar" Models

These devices are similar in construction and use. Accordingly, instructions for use are combined.

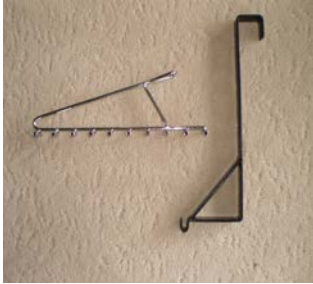

1. "On the Door"  
Device & Door Bracket



2. "On the Door" loaded  
with mixed Wardrobe



3. "On the Bar"  
Device

The 'On the Door" and "On the Bar" models are nearly identical. Both hang and display 10 clothing items. For both systems, hangers are always inserted from the right sides. Note also that the right sides of all tubes are funnel shape making inserting hangers easier. In addition, tubes on the devices have a slight tilt, keeping insert hangers from sliding out.

The devices differ: "On the Bar" has a front "horn" for hanging belts. "On the Door" has a triangle on the back top end which slips onto the bracket. (See Photo 1 and 2) "On the Bar" has a simple hook which goes over a closet rod or pole. (See Photo 3)

**Set up "On the Door".** Note that this model can create a closet anywhere the bracket can be hung and that includes many possibilities. For creating a closet with a door, the "On the Door" door bracket fits over the top of the door and should be placed near the center of the door. It will fit onto doors up to 1.5 inches thick to accommodate dorm room doors of older universities and older homes where thicker doors are common. Shims to make the bracket fit well are included in the packaging. Most times the shims are best placed on the bottom of the vertical portion of the bracket. (Referring to Photo 1 that would be on the vertical part of the bottom right corner). In that way, the 'On the Door device will not rub against the vertical surface. In certain instances it is helpful to affix the shim(s) to the bracket with Scotch tape.

### Some helpful hints on using your device:

- When fully loaded these devices will hold clothing items at about 45 degrees – giving excellent and instant viewing of your clothing.
- By moving the nose of these devices to nearly horizontal and slightly to the left, the tubes spread apart horizontally. This gives easier access to your clothing.

- **To hang or unhang a clothing item**, lift the nose (front end) of the device until the bottom of the device is nearly horizontal. By doing that, the hung items spread apart. Next move the nose, to the side (preferably to the left) and with your free hand grasp the insert hanger for the selected item, slip the hanger out of its tube and **bring the item down, away from its neighbors, and out of the device**. By doing that, adjacent hung items are not disturbed.

[Click here for a demonstration on how to use Smartie's Hang 10 On the Door](#)

[Click here for a demonstration on how to use Smartie's Hang 10 On the Bar](#)

**\*\*USA and PRC patent pending**

**Caution: These devices are not toys and children should not be allowed to play with them as they could cause injury.**